



# Pulse width modulation

**DRAFT VERSION - This is part of a course slide set, currently under development at:**

<http://mbed.org/cookbook/Course-Notes>

We welcome your feedback in the comments section of the course notes cookbook page. Tell us if these slides are useful, if you would use them to help run lessons, workshops or training, and how you'd improve them.

Written by R. Toulson (Anglia Ruskin University) and  
T. Wilmshurst (University of Derby), (c) ARM 2011

An accompanying textbook is also being considered if there is interest

# Pulse width modulation

- The concept of pulse width modulation (PWM)
- Applications using pulse width modulation
- Evaluating pulse width modulation on the mbed
- Controlling LED brightness with PWM
- Controlling servo position with PWM
- Outputting to a piezo buzzer

# Introducing pulse width modulation (PWM)


What is Pulse Width Modulation?

- Pulse width modulation (PWM) is a simple method of using a rectangular digital waveform to control an analog variable
- PWM control is used in a variety of applications, ranging from communications to automatic control

# Introducing pulse width modulation (PWM)


- The period is normally kept constant, and the pulse width, or “on” time is varied
- The duty cycle is the proportion of time that the pulse is ‘on’ or ‘high’, and is expressed as a percentage:

$$\text{duty cycle} = 100\% * (\text{pulse on time}) / (\text{pulse period})$$

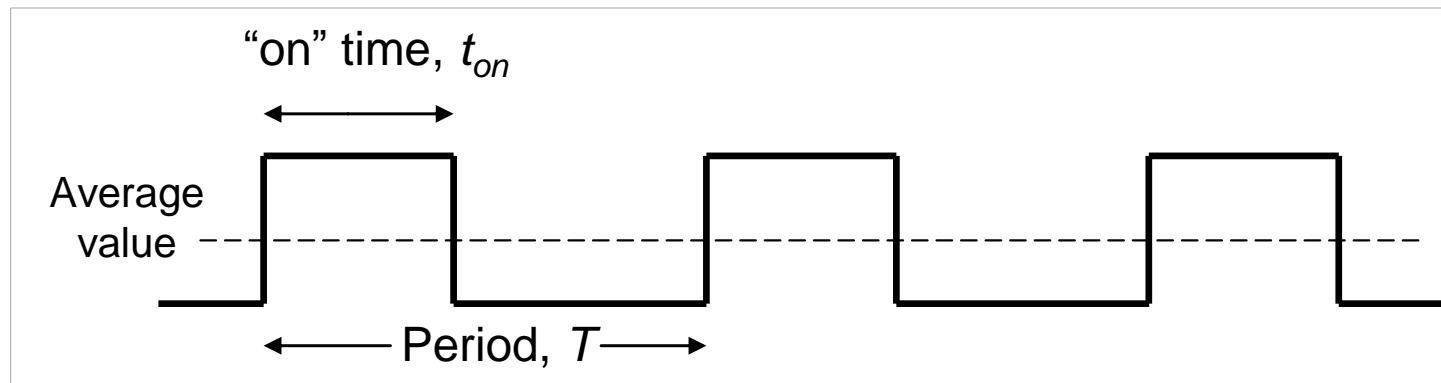


# Introducing pulse width modulation (PWM)

- Whatever duty cycle a PWM stream has, there is an average value, as indicated by the dotted line
- If the on time is small, the average value is low; if the on time is large, the average value is high
- By controlling the duty cycle, we control this average value

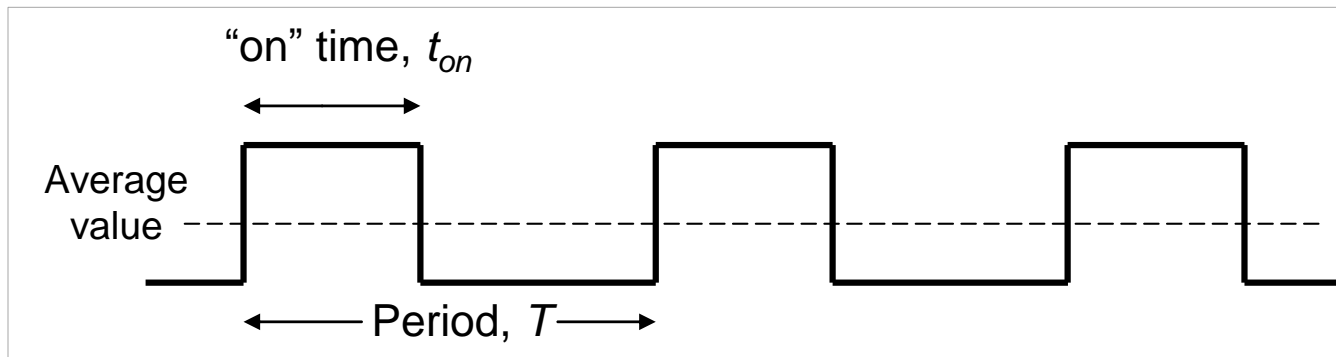

# Introducing pulse width modulation (PWM)

- The average value can be extracted from the PWM stream with a low-pass filter
- In this case, and as long as PWM frequency and values of  $R$  and  $C$  are appropriately chosen,  $V_{out}$  becomes an analog output
- In practice, this sort of filtering is not always required; many physical systems have response characteristics which, in reality, act like low pass filters

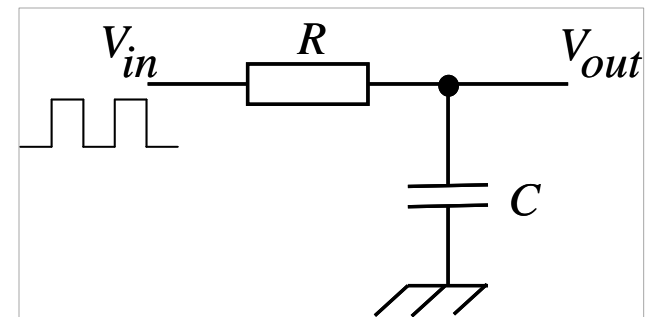


# Applications using pulse width modulation

- Devices used in robotics
  - DC motors
  - Servos
  - Solenoids
  - Closed loop control systems
  - Communications and pulse code modulation
- Benefits include
  - Microprocessor control
  - Efficient use of power
  - Tolerance to analog noise
  - Not susceptible to component drift

# Pulse width modulation on the mbed

- The PwmOut interface is used to control the frequency and mark-space ratio of a digital pulse train
- The mbed has up to six PWM outputs, on pins 21 to 26, although these PwmOuts all share the same period timer

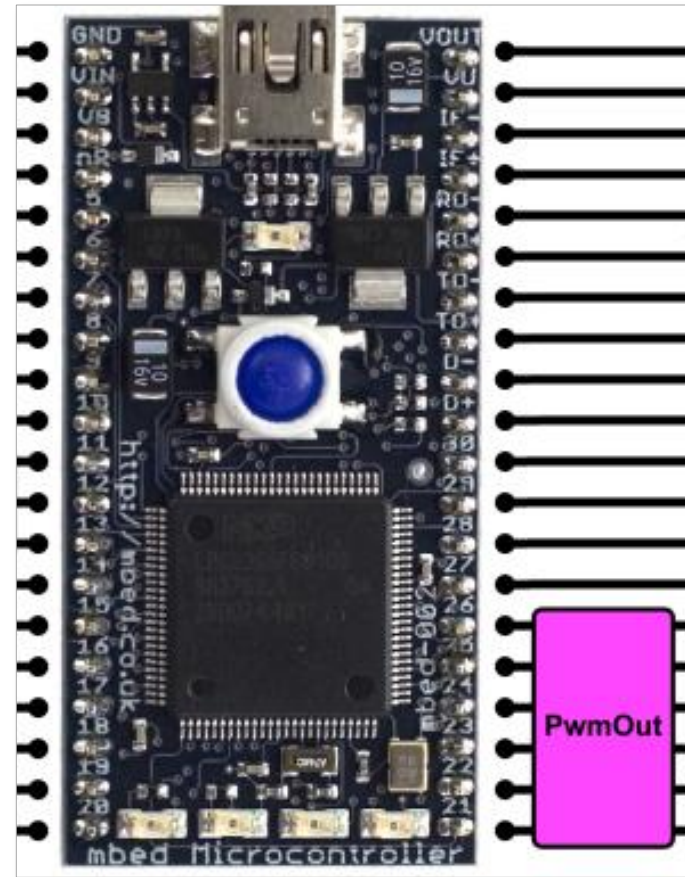



# Pulse width modulation on the mbed

The library functions are shown in the table below

<b>PwmOut</b>	<b>A pulse-width modulation digital output</b>
<b>Functions</b>	<b>Usage</b>
PwmOut	Create a PwmOut connected to the specified pin
write	Set the output duty-cycle, specified as a normalised float (0.0 – 1.0)
read	Return the current output duty-cycle setting, measured as a normalised float (0.0 – 1.0)
period period_ms period_us	Set the PWM period, specified in seconds (float), milli-seconds (int) or micro-seconds (int), keeping the duty cycle the same.
pulsewidth pulsewidth_ms pulsewidth_us	Set the PWM pulsewidth, specified in seconds (float), milli-seconds (int) or micro-seconds (int), keeping the period the same.
operator=	A operator shorthand for write()
operator float()	An operator shorthand for read()



# Evaluating pulse width modulation on the mbed

- Exercise 1: Create a PWM signal which we can see on an oscilloscope. The following code will generate a 100 Hz pulse with 50% duty cycle

```
#include "mbed.h"
PwmOut PWM1(p21);
int main() {
    PWM1.period(0.010);           // set PWM period to 10 ms
    PWM1=0.5;                     // set duty cycle to 50%
}
```

# Evaluating pulse width modulation on the mbed

- Exercise 2: Change the duty cycle to some different values, say 0.2 (20%) and 0.8 (80%) and check the correct display is seen on the 'scope, as shown below

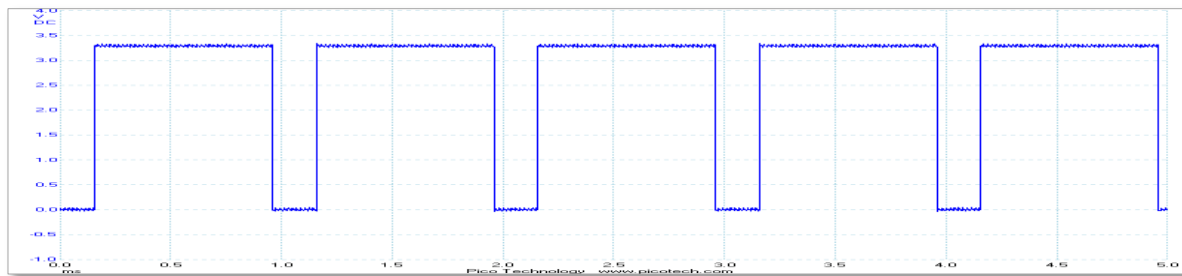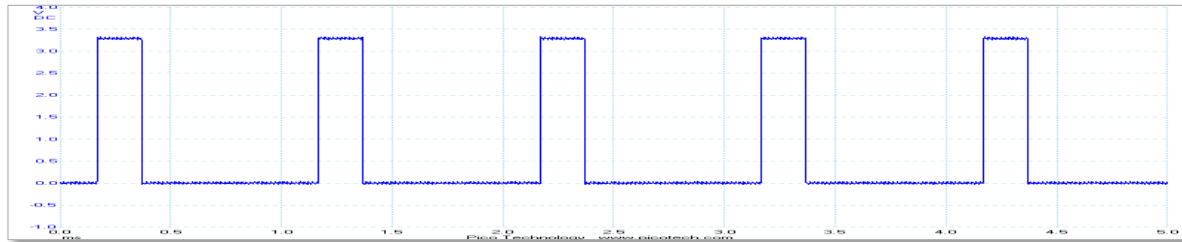

# Controlling LED brightness with PWM

Exercise 3: This example code uses a pulse width modulation signal to increase and decrease the brightness of the onboard LED

The program requires the use of a host terminal application to communicate the brightness value to the mbed, in this example by using the 'u' and 'd' keys

```
// host terminal LED dimmer control

#include "mbed.h"
Serial pc(USBTX, USBRX);           // tx, rx
PwmOut led(LED1);
float brightness=0.0;


int main() {
    pc.printf("Control of LED dimmer by host terminal\n\r");
    pc.printf("Press 'u' = brighter, 'd' = dimmer\n\r");
    while(1) {
        char c = pc.getc();
        wait(0.001);
        if((c == 'u') && (brightness < 0.1)) {
            brightness += 0.001;
            led = brightness;
        }
        if((c == 'd') && (brightness > 0.0)) {
            brightness -= 0.001;
            led = brightness;
        }
        pc.printf("%c %1.3f \n \r",c,brightness);
    }
}
```

# Controlling servo motor position with PWM

- A servo is a small rotary position control device, used for example in radio-controlled cars and aeroplanes to position controllers such as steering, elevators and rudders
- The servo shaft can be positioned to specific angular positions by sending the servo a PWM signal
- As long as the modulated signal exists on the input line, the servo will maintain the angular position of the shaft
- As the modulated signal changes, the angular position of the shaft changes

# Controlling servo position with PWM


This diagram shows the PWM timing requirements to control the servo between 0 and 180 degrees

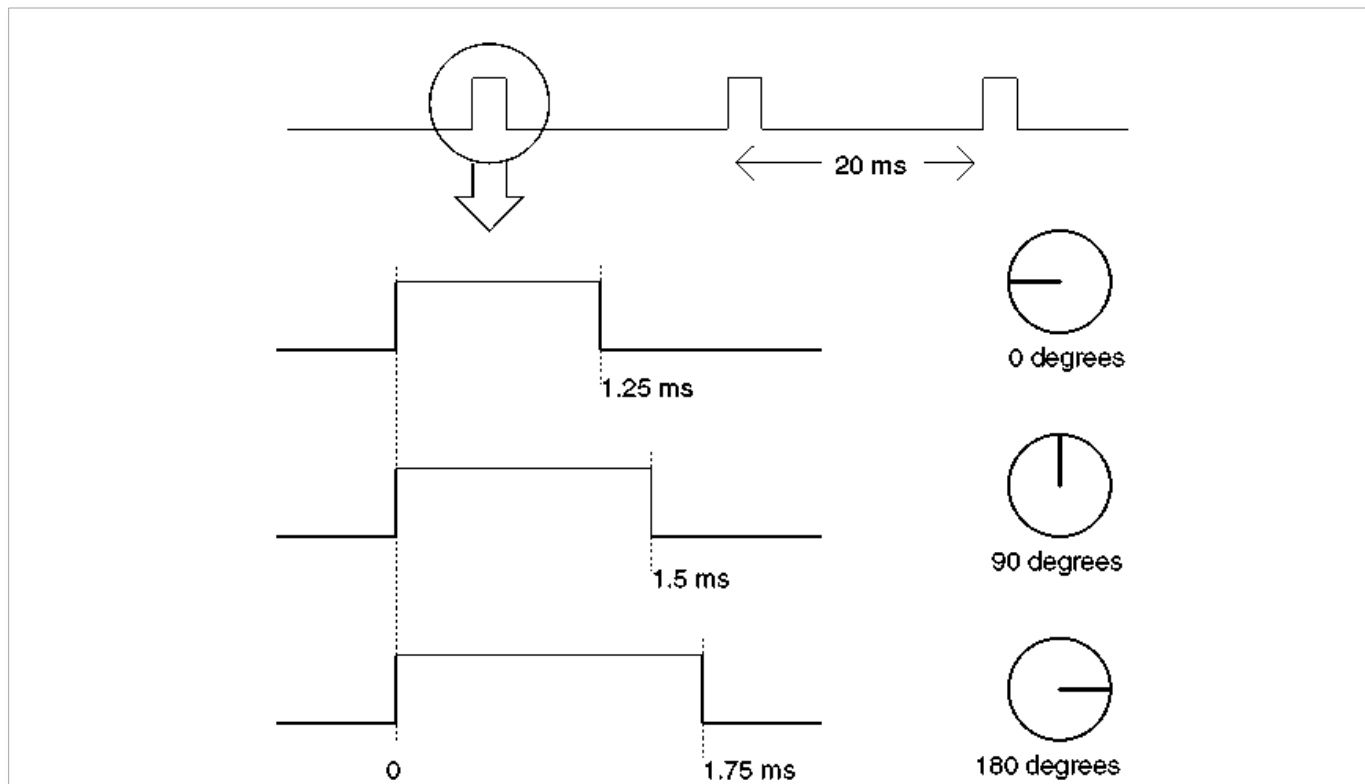

# Controlling servo position with PWM


The servo requires a higher current than the USB standard can provide, and so it is essential that you power the servo using an external power supply

A 4xAA (6V) battery pack meets the supply requirement of the servo

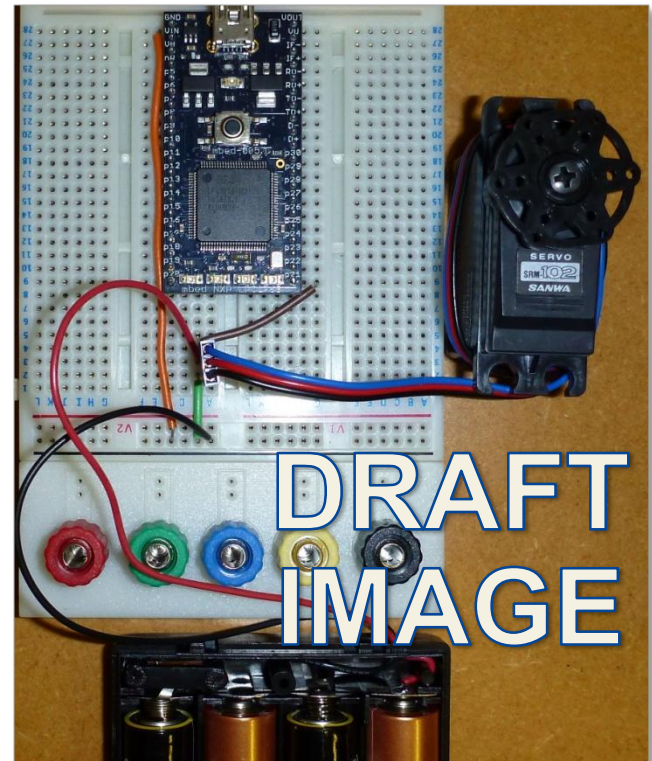

# Controlling servo position with PWM


- Exercise 4: Connect the servo to the mbed as indicated. Set the PWM period to 20 ms
- Try a number of different duty periods and observe the servo's motion

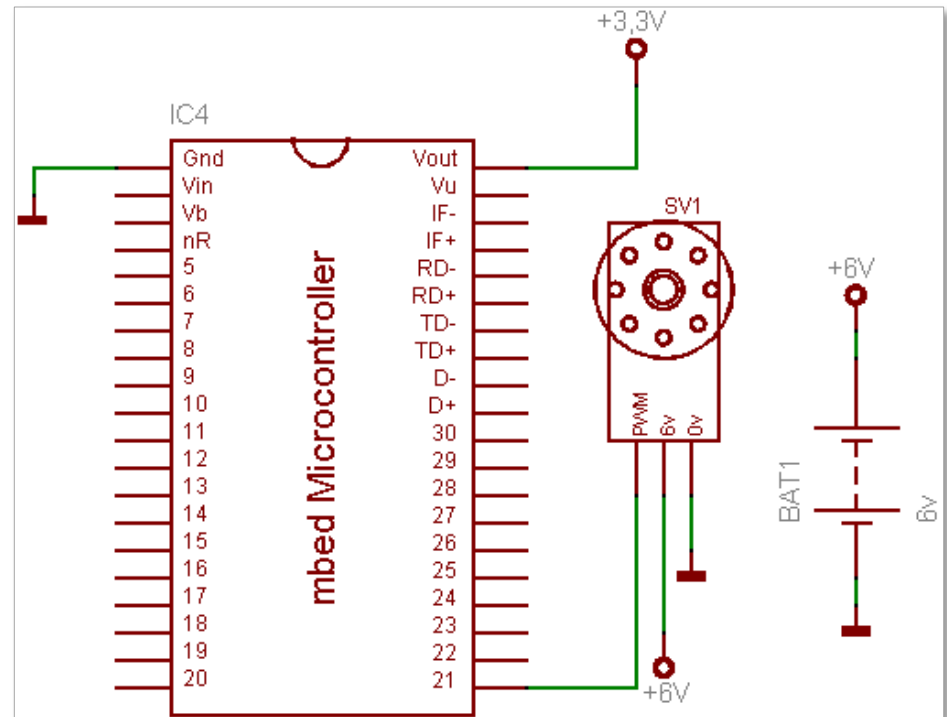



# Open loop control of a servo motor

- Exercise 5: Controlling servo position with the potentiometer
  - Connect a servo to the mbed with a potentiometer connected to pin 20
  - Write a program which allows the potentiometer to control servo position
  - Scale input values so that the full range of potentiometer adjustment leads to the full range of servo position change

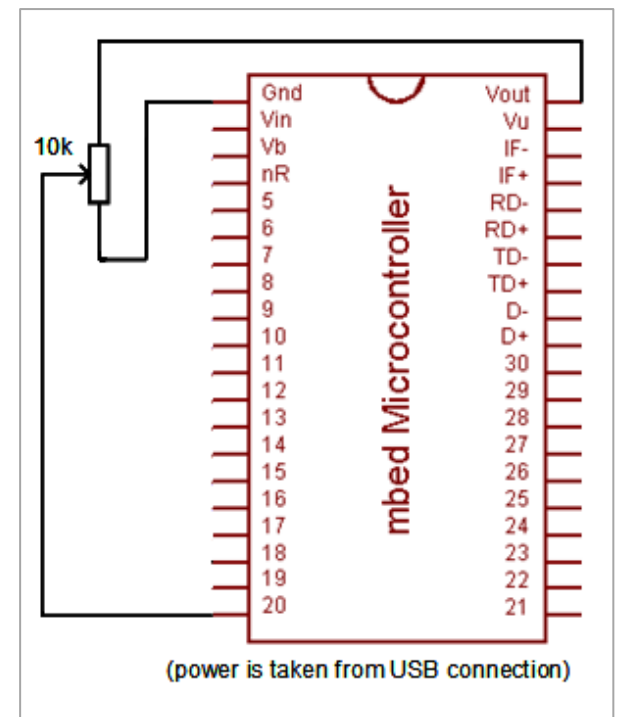

# Outputting to a piezo buzzer

- We can connect the PWM output to a piezo buzzer to make sound
- If the duty cycle is set to 50% the PWM frequency will define the pitch of the sound heard
- Exercise 6: Connect a piezo buzzer one of the PWM outputs. Set duty cycle to 50% and frequency to 500 Hz. Ensure that you can create sound with the PWM. Change the frequency of the PWM output and notice the difference in sound with changes in frequency.



# Outputting to a piezo buzzer

The following table converts the musical piece into frequencies and beat lengths

Word/syllable	Musical note	Frequency (Hz)	Beats
oran	E	659	1
ges	C#	554	1
and	E	659	1
le	C#	554	1
mons	A	440	1
says	B	494	½
the	C#	554	½
bells	D	587	1
of	B	494	1
st	E	659	1
clem	C#	554	1
en's	A	440	2

# Outputting to a piezo buzzer

The following program implements the 'Oranges and Lemons' musical output

```
// Oranges and Lemons program
#include "mbed.h"

PwmOut buzzer(p21);
float frequency[]={659,554,659,554,550,494,554,587,494,659,554,440};
//frequency array
float beat[]={1,1,1,1,1,0.5,0.5,1,1,1,1,2};
//beat array
int main() {
    while (1) {
        for (int i=0; i<=11; i++) {
            buzzer.period(1/(frequency[i])); // set PWM period
            buzzer=0.5; // set duty cycle
            wait(0.5*beat[i]); // hold for beat period
        }
    }
}
```

Experiment with adding multipliers to the frequency and beat values to change the speed and pitch of the piece.

# Summary

- The concept of pulse width modulation (PWM)
- Applications using pulse width modulation
- Evaluating pulse width modulation on the mbed
- Controlling LED brightness with PWM
- Controlling servo position with PWM
- Outputting to a piezo buzzer